










Pressure Tare for Firmware Version 8+

Depending on the valve type the CT1000 may need to be configured to work properly.

- 1 – Using the  key, change the MODE to SETUP
- 2 – Using the  key, change the parameter to PASSWORD
- 3 – Using the   keys, change the value to 33
- 4 – Using the  key, change the MODE to CAL
- 5 – Using the  key, change the parameter to 'PresZero'
- 6 – Using the   keys, press to tare.
- 7 – Using the  key, change the MODE back to RUN